

3 EASY STEPS



Remove broken slate




Position **Slate Repair Hook** between slates so that bottom hook is 10mm above the finished slate baseline and fix with a nail. Hang hookpull on hook.



Slide new slate into place, then gently pull the **Hook Pull** until the **Slate Repair Hook** hooks the base of the slate. Remove **Hook Pull**, **DO NOT OVER STRETCH**.

How it works

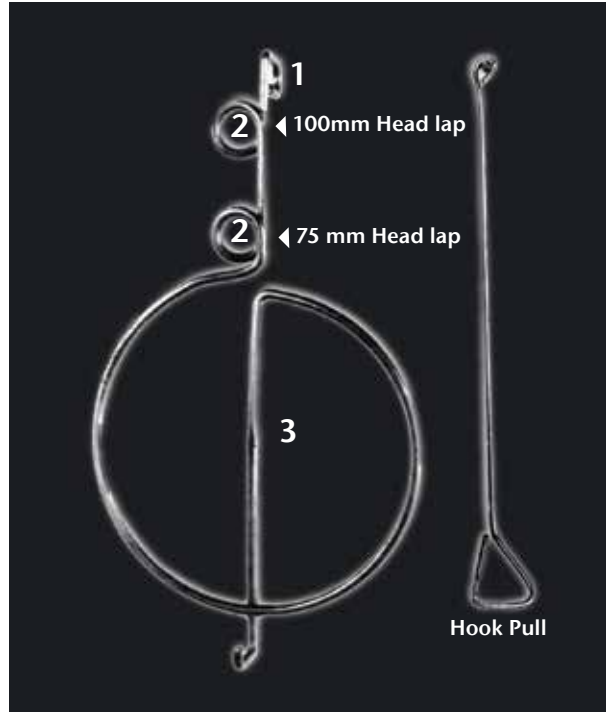

1. Fits between the slates. Once nail fixing is applied at 2, this provides a vertical line to 3 and prevents lateral movement.
2. Two Nail fixings are offered. The nail fixing to be used is dependent on size of slate headlap.
3. Upward biased spring that remains in contact with the underside of the object slate whilst disappearing between the two slates underneath. The underside contact prevents the hookpull pulling off the **Slate Repair Hook**.

THIS DEVICE IS FOR USE WHEN REPLACING A BROKEN SLATE

Replace a roof slate with **Slate Repair Hook**:

- for general repair
- after solar panel bracket mounting
- after roof light/window installation
- after installing slate vents
- conservation and heritage buildings

- Do away with unsightly lead straps which give the impression that a roof is unsafe and prone to further problems
- Older buildings can keep their original appearance
- Failsafe - properly installed it cannot fail
- Fit and forget - Once installed no need to return to the job to repair, Silicone is not a tradesmans repair!
- Client will be more than happy to pay a little extra for improved appearance and longevity of repair